


Ersatzteilliste 2010 Spare part list 2010



57091 Optimax 10000

57092 Optimax 15000

57093 Optimax 20000

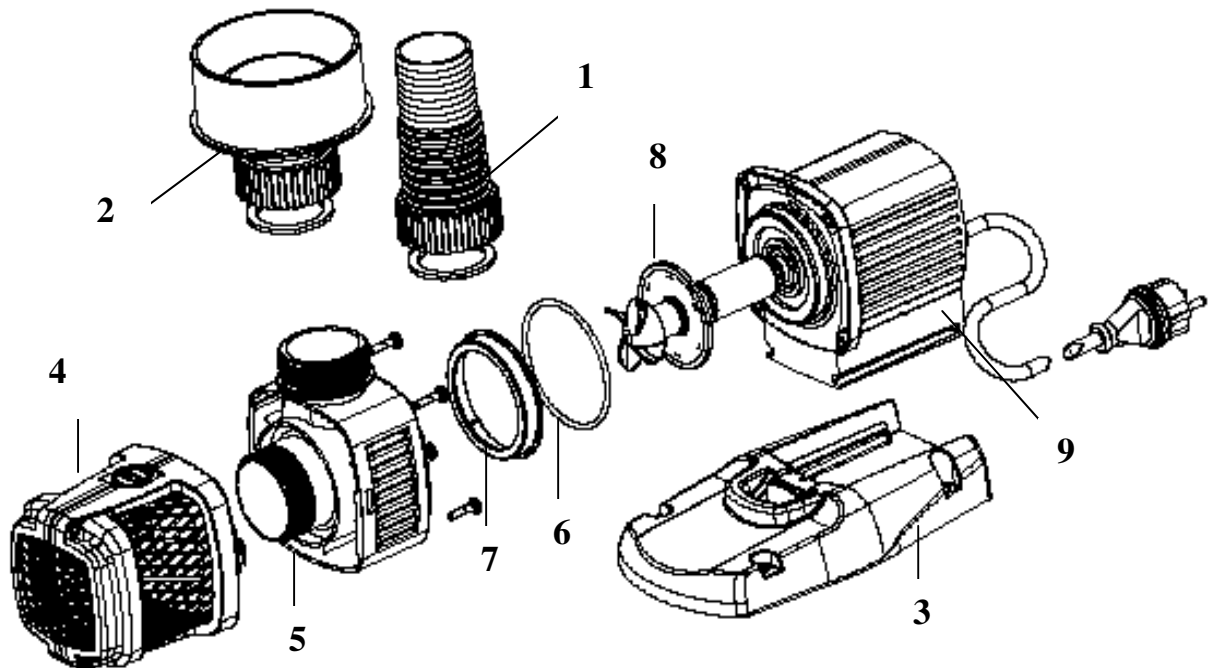

Pos	Optimax 10000	Optimax 15000	Optimax 20000	Ersatzteil-bezeichnung	Spare part description
1	35577	35577	35577	Schlauchanschluss	spare - nozzle kit
2	35578	35578	35578	Rohranschluss	pipe - connector
3	28127	28127	28127	Pumpenfuss Optimax	pump-base
4	35509	35509	35509	Berührungsschutz	contact protection
5	35580	35580	35580	Pumpengehäuse	hump housing + bolts
6	28539	28539	28539	O-Ring 78 x 4,3	o-ring 78 x 4,3
7	28125	28125	28125	Haltering	retainer ring
8	35581	35582	35583	Rotor kpl.	rotor cpl.
9	35604	35604	35604	BG Motor Optimax	assembly drive